



Take again bottom chassis plate and x4 3D-printed (or metal 55mm height) standoffs, and x8 M2.5x10mm screws.

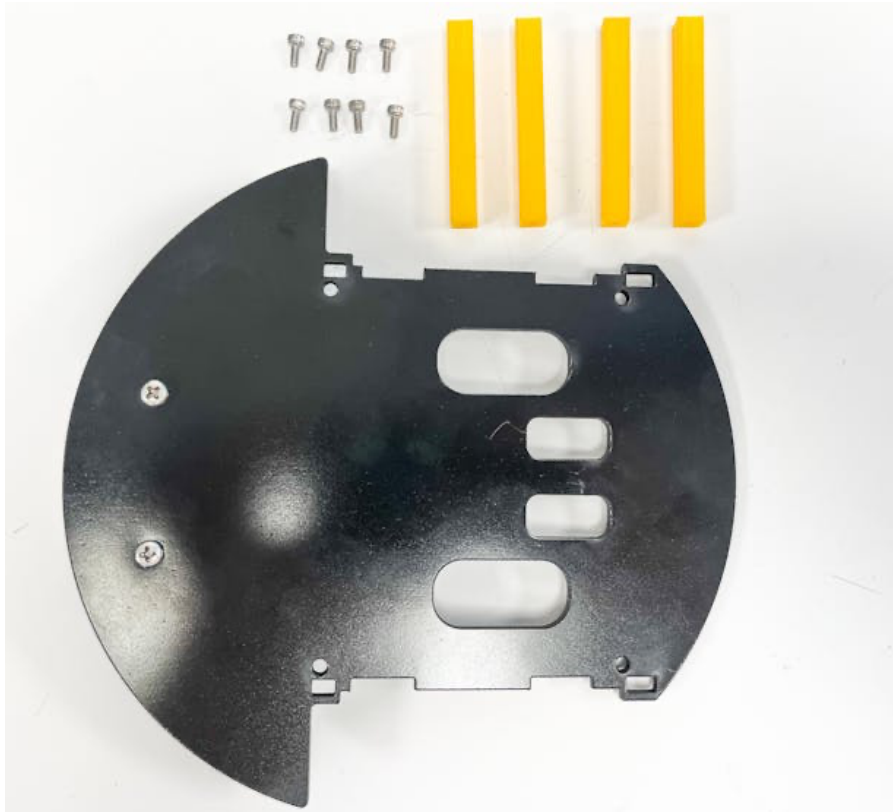

Install screws into the 4 mounting points on the chassis bottom plate.



Install standoffs from other side of the chassis.

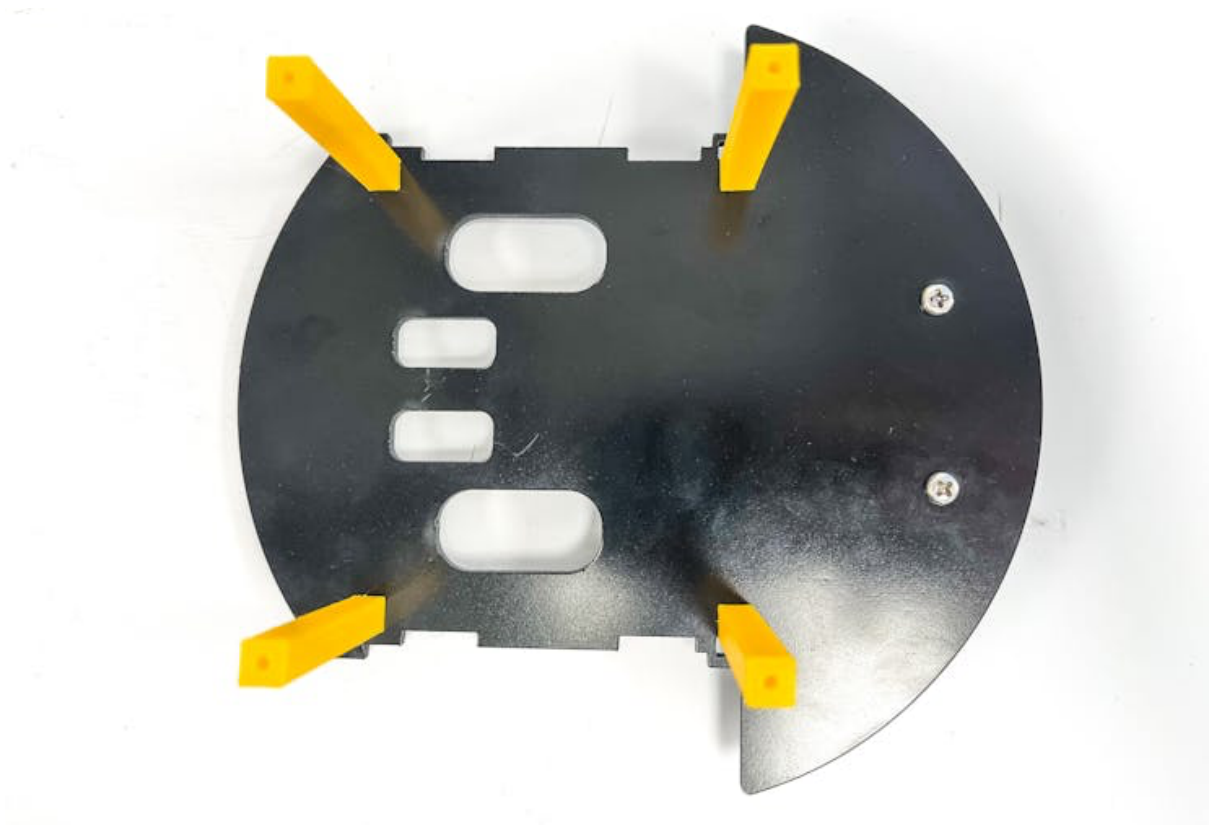

Make sure that standoffs are aligned with the slots on the chassis.



